

Surface View™

Surface View Murals™

Please read these instructions carefully before installing your mural.

What you'll need:


- Tape measure
- Spirit level
- Soft pencil
- Wallpaper paste brush or roller
- Brush or squeegee
- Plumb line
- Stanley knife or similar sharp blade
- 50mm plastic strips to height of wall
- Ready mixed heavy-duty wallpaper paste

We provide you with the required lengths of protective plastic strips, as well as a free Surface View squeegee with every full mural order.

How to install:

- 1) Ensure surface to be covered is clean, smooth, dry and in a sound condition. Dry and absorbent surfaces require painting (good quality emulsion) or sealing using sizing paste. If the surface is not in a good condition consider applying a heavy grade lining paper.
- 2) The wall mural is supplied in 'drops' of equal width (up to 1220 mm) and length. Carefully unpack the drops and lay them out in order. Check for colour matching across all drops.
- 3) The whole image has an additional 50mm bleed all round and each section join has a 25mm bleed left and right to create an overlap that is cut back to produce a butt joint. This helps position the mural perfectly, allowing for any small irregularities.
- 4) It is essential to get the starting position correct on the wall. Each panel has bleed marks and a mid point mark to help positioning. Start by measuring the width of the first drop (minus 50mm for the extra bleed). Use this measurement to draw a vertical line from the left hand edge of the wall; use a plumb line to ensure it's completely vertical.

Instructions continue on page 2

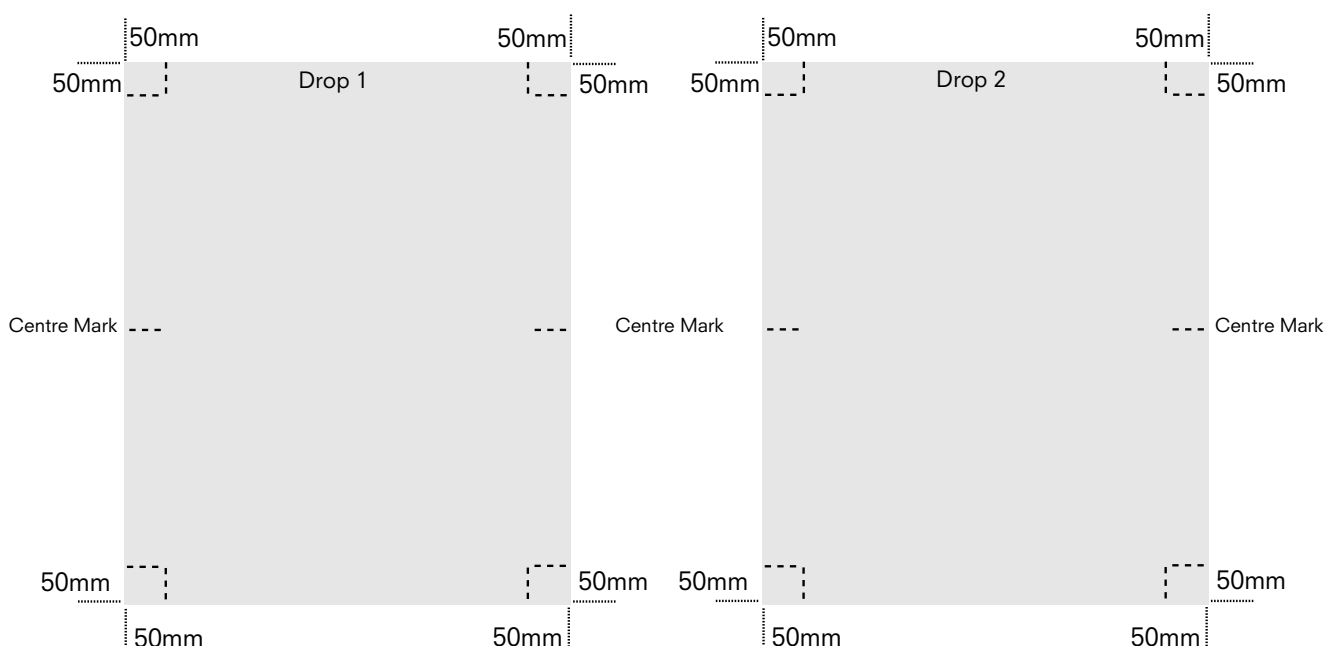

Surface View™

Surface View Murals™

5) Apply a ready mixed heavy-duty wallpaper paste to the wall, one drop at a time.

6) Fix the first drop from the left hand side, making sure the right hand edge of this drop aligns with the vertical line. This is the most critical point and this first panel must be vertical to the plumb line. Smooth out any bubbles or ripples with a brush or your squeegee, in an up and down direction only. Wipe off any excess paste with a damp sponge. Trim the left hand edge and the top and bottom.

7) The second and subsequent drops should be overlapped by 50mm ensuring the image aligns accurately. Gently lift the two overlapped edges and fix the supplied 50mm plastic strip to the wall (the paste should hold it in place) under the lifted edges. Smooth the edges over the plastic strip. Using a straight edge and sharp blade, trim down the middle of the overlap, removing the plastic strip and excess wall mural. Smooth down both edges to make a seamless butt join, making sure the wall mural is fixed at the edges.

8) Finally, trim the right hand edge of the final panel.

If you have any problems with installation, please contact us on XXX XXXX for further information and advice.

