

Mural

Just Stick It Up™

Page 1 of 3



Supplied

Soft squeegee
50mm protective plastic
strips to your wall height



What you'll need

Tape measure
Spirit level
Soft pencil
Low tack masking tape
Plumb line
Stanley knife or similar
sharp blade
Straight metal edge ruler
Wallpaper smoother or
brush
Wallpaper seam roller

1. How to install


Our Just Stick It Up™ mural wallpaper are ready for installing onto walls that have been correctly prepared. For information or assistance on the preparation of the wall prior to application, please contact a member of the Surface View team for guidance. Please read these instructions carefully before installing your mural. If you'd rather we took care of it, contact us to arrange professional installation by our specialists.



If you have any questions about installation, please contact us on 0118 922 1327 or email info@surfaceview.co.uk for further information and advice.

Mural wallpaper Just Stick It Up™

Page 2 of 3

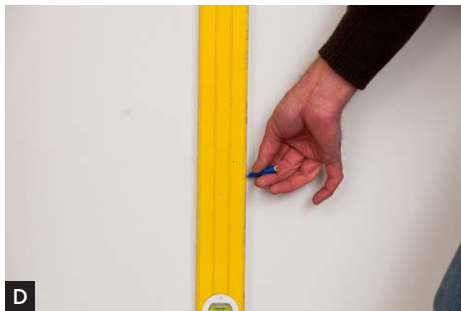

2. Preparation

Ensure your wall surface has been prepared correctly and is clean, smooth, dry and in a sound condition. For more information on the preparation of the wall prior to application, please contact a member of the Surface View team for guidance.

3. Starting out

The wall mural is supplied in 'drops' of equal width and length which will be shown on your PDF proof. Carefully unpack these drops and lay them out in order. (A) You'll find a reference on each panel at the top to help. Note that the whole image has an additional 50mm bleed all round and each section join has a 25mm overlap left and right (unless otherwise requested), to give an overlap that's cut back to create an accurate butt joint. Whilst laid out, use your masking tape to create handy markers (B) as guides to where the image from the different panels line up, mark these points out on the tape. Roll up and label each roll.

4. The first piece

Key to a successful installation is getting the correct starting position on the wall. Each panel has bleed marks and a mid point mark to help positioning. Start by measuring the width of the first drop (minus 50mm for the extra bleed). Use this measurement to draw a vertical line from the right hand edge of the wall; use a plumb line or spirit level to ensure that it's completely vertical.

Surface View Tips - We recommend starting the installation with the right hand panel to assist with trimming the section panels. If you'd prefer to start with the left hand panel, make sure you reverse the left/right instructions in this guide. Simply start to peel away the release liner from your first drop when you're ready to start applying your mural. Fix the first drop from the right hand side, making sure the left hand edge of this drop aligns with the vertical line. This is the most critical point and this first panel must be vertical to the plumb line. Smooth out any bubbles or ripples with a brush, smoother or your squeegee, in a vertical direction only.

5. Applying the second and subsequent drops

The second and subsequent drops should be overlapped by 50mm to make sure that the image aligns accurately. Use your masking tape guides to help align these image overlaps. Smooth out any bubbles or ripples with your squeegee, in a vertical direction. Continue until all panels are up before moving on to trimming. Remove masking tape.

6. Trim top and bottom

Trim the right hand edge and the top and bottom, using a straight edge for guidance.

7. Trimming the joins

Gently lift the two overlapped edges and fix the supplied 50mm plastic strip to the wall (the self-adhesive back should hold it in place) under the lifted edges. Smooth the edges over the plastic strip. Using a straight edge and sharp blade, trim down the middle of the overlap, then remove the plastic strip and excess wall mural. Smooth down both edges to make a seamless butt join, making sure the wall mural is fixed at the edges. Finally trim the left hand edge.